



**SPH-A420 by Samsung®**

© 2007 Samsung Mobile.  
Printed in Korea.



# Table of Contents

---

<b>Introduction .....</b>	<b>i</b>
<b>Your Phone's Menu .....</b>	<b>ii</b>
<b>Section 1: Getting Started .....</b>	<b>1</b>
<b>1A. Setting Up Service .....</b>	<b>3</b>
Getting Started With Your Service .....	4
Setting Up Your Voicemail .....	5
Getting Help .....	6
<b>Section 2: Your Phone .....</b>	<b>9</b>
<b>2A. Your Phone: The Basics .....</b>	<b>11</b>
Front View of Your Phone .....	12
Viewing the Display Screen .....	16
Features of Your Phone .....	17
Turning Your Phone On and Off .....	18
Using Your Phone's Battery and Charger .....	19
Navigating Through Phone Menus .....	23
Displaying Your Phone Number .....	25
Making and Answering Calls .....	25
Entering Text .....	36
<b>2B. Controlling Your Phone's Settings .....</b>	<b>41</b>
Sound Settings .....	42
Display Settings .....	47
Location Settings .....	51
Messaging Settings .....	52
Airplane Mode .....	55
TTY Use With Trumpet Mobile Service .....	56
Phone Setup Options .....	58
Call Setup Options .....	59
<b>2C. Setting Your Phone's Security .....</b>	<b>63</b>
Accessing the Security Menu .....	64
Using Your Phone's Lock Feature .....	64
Using Special Numbers .....	66
Erasing Contacts .....	66
Resetting Your Phone .....	67

## **2D. Managing Call History . . . . . 69**

Viewing History .....	70
Call History Options.....	71
Making a Call From Call History.....	72
Saving a Phone Number From Call History .....	73
Prepending a Phone Number From Call History .....	74
Erasing Call History.....	74

## **2E. Using Contacts . . . . . 75**

Adding a New Contacts Entry.....	76
Finding Contacts Entries .....	77
Contacts Entry Options .....	79
Adding a Phone Number to a Contacts Entry .....	80
Editing a Contacts Entry's Phone Number.....	80
Assigning Speed Dial Numbers.....	81
Editing a Contacts Entry.....	82
Selecting a Ringer Type for an Entry.....	82
Dialing Trumpet Mobile Services .....	83

## **2F. Using the Phone's Scheduler and Tools . . . . . 85**

Using Your Phone's Scheduler.....	86
Using Your Phone's Alarm Clock.....	89
Using Your Phone's Memo Pad .....	90
Using Your Phone's Tools.....	91

## **Section 3: Trumpet Mobile Service Features . . . . . 95**

### **3A. Trumpet Mobile Service Features: The Basics . . . . . 97**

Using Voicemail.....	98
Using SMS Text Messaging.....	107
Using Caller ID.....	110
Responding to Call Waiting .....	111

### **3B. Trumpet Mobile Voice Kit . . . . . 113**

Getting Started With Trumpet Mobile Voice Kit.....	114
Programming the Phone for Voice Dialing.....	116
Setting Up Voice Dial .....	117
Placing a Call Using Voice Dial .....	118
Reviewing Voice Dial Entries .....	118
Erasing Voice Dial Entries .....	119
Managing Voice Memos .....	119

<b>Section 4: Safety and Warranty Information</b>	<b>123</b>
<b>4A. Important Safety Information</b>	<b>125</b>
General Precautions	126
Maintaining Safe Use of and Access to Your Phone	127
Using Your Phone With a Hearing Aid Device	129
Caring for the Battery	131
Radiofrequency (RF) Energy	132
Owner's Record	133
Phone Guide Proprietary Notice	134
<b>4B. Manufacturer's Warranty</b>	<b>135</b>
Manufacturer's Warranty	136
<b>Index</b>	<b>141</b>



# Introduction

---

This **Phone Guide** introduces you to all the features of your new phone. It's divided into four sections:

- ♦ **Section 1: Getting Started**
- ♦ **Section 2: Your Phone**
- ♦ **Section 3: Trumpet Mobile Service Features**
- ♦ **Section 4: Safety and Warranty Information**

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

## Phone Guide Note:

Due to updates in phone software, this printed guide may not be the most current version for your phone. Visit [www.samsungmobileusa.com](http://www.samsungmobileusa.com) to access the most recent version of the phone guide.

## WARNING

Please refer to the **Important Safety Information** section on page 125 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.

## Your Phone's Menu

---

The following list outlines your phone's menu structure. For more information about navigating through the menus, please see "Navigating Through Phone Menus" on page 23.

<b>CONTACTS (RIGHT SOFTKEY)</b>		
<b>VOICE KIT (LEFT SOFTKEY)</b>		
<b>PRESS MENU TO DISPLAY THE FOLLOWING:</b>		
<b>1: VOICE KIT</b>		
1: Voice Dial		
1: Record	2: Review	3: Set Active
2: Voice Memo		
1: Record	2: Review	
<b>2: MESSAGING</b>		
1: Send Message		
2: Inbox		
3: Outbox		
4: Drafts		
5: Voicemail		
1: Call Voicemail	2: Details	
3: Clear Envelope		
6: Settings		
1: Notification		
Message and Icon		Icon only



<b>2: Preset Messages</b>		
1: Can't talk right now. Send me a message. 2: Call me 3: Where are you? 4: Can you pick up 5: Meet me at 6: Let's get lunch. 7: The meeting has been cancelled. 8: I'll be there at 9: What time does it start? 10: I love you! 11: [Empty] 12: [Empty] 13: [Empty] 14: [Empty] 15: [Empty] 16: [Empty] 17: [Empty] 18: [Empty] 19: [Empty] 20: [Empty]		
<b>3: Edit Signature</b>		
On	Off	
<b>4: Message Alerts</b>		
<b>1: Alert Volume</b>		
1: Voicemail	2: Text Message	
<b>2: Alert Type</b>		
1: Voicemail	2: Text Message	
<b>3: Reminder</b>		
Off	Once	Every 2 min
<b>5: Save in Outbox</b>		
Yes	No	
<b>6: Auto Erase</b>		
Yes	No	
<b>3: TOOLS</b>		
1: Today		
2: Scheduler		
3: Task List		
4: Countdown		
5: Memo Pad		
6: World Time		
Options		

1: DST Setting		
On	Off	
7: Alarm Clock		
1: Alarm #1		
2: Alarm #2		
3: Alarm #3		
8: Calculator		
9: Set Time (displayed when there is no time information)		
4: SETTINGS		
1: Display		
1: Screen Saver		
Trumpet Mobile World Time Analog Clock Road	Launch Pad Calendar Apple SnowBoarding	Digital Clock Dual Clock Flower
2: Menu Style		
Grid Style	List Style	
3: Dialing Font		
1: Color		
Basic Hyphenate	Rainbow	Monochrome
2: Size		
Large	Normal	Small
4: Greeting		
5: Backlight		
1: Main Display		
Flip Open 8 seconds	30 seconds	15 seconds
2: Keypad		

Flip Open 8 seconds	30 seconds Off	15 seconds
<b>3: Pwr Save Mode</b>		
On	Off	
<b>4: Brightness</b>		
Lowest High	Low Highest	Med
<b>6: Service Light</b>		
On	Off	
<b>2: Sounds</b>		
<b>1: Ringer Type</b>		
<b>1: Voice Calls</b>		
1: With Caller ID		
Melodies	Single Tones	Ring Tones
2: No Caller ID		
Single Tones	Ring Tones	Melodies
<b>2: Messages</b>		
1: Voicemail		
Single Tones	Ring Tones	Melodies
2: Text Message		
Ring Tones	Melodies	Single Tones
<b>3: Schedule</b>		
Ring Tones	Melodies	Single Tones
<b>2: Volume</b>		
<b>1: Ringer</b>		
Ringer Off Vibrate	1-Beep	Level 1 – 8
<b>2: Messages</b>		
Use Ringer Vol.		

Separate Vol.		
Ringer Off	1-Beep	Level 1 – 8
Vibrate		
<b>3: Voicemail</b>		
Use Ringer Vol.		
Separate Vol.		
Ringer Off	1-Beep	Level 1 – 8
Vibrate		
<b>4: Alarms</b>		
Use Ringer Vol.		
Separate Vol.		
Ringer Off	Level 1 – 8	
Vibrate		
<b>3: Alerts</b>		
<b>1: Minute Beep</b>		
On	Off	
<b>2: Service</b>		
On	Off	
<b>3: Connect</b>		
On	Off	
<b>4: Sig. Fade Tone</b>		
On	Off	
<b>5: Power On/Off</b>		
On	Off	
<b>4: Key Tone</b>		
<b>1: Tone Type</b>		
Xylophone	DTMF	Simple
<b>2: Tone Level</b>		

Tone Off	Level 1 – 8	
3: Tone Length		
Short	Long	
3: Security		
1: Lock Phone		
Unlocked	On Power-up	Lock Now
2: Change Lock		
3: Special #		
1: Empty		
2: Empty		
3: Empty		
4: Erase Contacts		
Yes	No	
5: Reset Phone		
Yes	No	
4: Roaming		
1: Set Mode		
Automatic	Home Only	
2: Call Guard		
On	Off	
5: Launch Pad		
1: Up Key		
Ringer Type Missed Alerts Text Inbox Alarms	Call History Contacts Send Message Calculator	Voice Dial Messaging Scheduler Display
2: Down Key		

Ringer Type Missed Alerts Text Inbox Alarms	Call History Contacts Send Message Calculator	Voice Dial Messaging Scheduler Display
<b>3: Left Key</b>		
Ringer Type Missed Alerts Text Inbox Alarms	Call History Contacts Send Message Calculator	Voice Dial Messaging Scheduler Display
<b>4: Right Key</b>		
Ringer Type Missed Alerts Text Inbox Alarms	Call History Contacts Send Message Calculator	Voice Dial Messaging Scheduler Display
<b>6: Others</b>		
<b>1: Call Setup</b>		
<b>1: Abbrev. Dial</b>		
On	Off	
<b>2: Contact Match</b>		
On	Off	
<b>3: Restriction</b>		
<b>1: Outgoing Call</b>		
Allow all	Contacts Only	Special# Only
<b>4: Call Answer</b>		
Any Key	Talk Key	Flip Open
<b>5: Auto Answer</b>		
Yes	No	
<b>2: Language</b>		
English	Español	
<b>3: Airplane Mode</b>		
On	Off	

4: Location		
On	Off	
5: Audio Routing		
Normal	Headset Only	
6: TTY Mode		
TTY Off TTY Full	TTY + Hear	TTY + Talk
7: Phone Info		
1: Phone Number		
2: Icon Glossary		
3: Version		
4: Advanced		
5: CALL HISTORY		
1: Outgoing Calls		
2: Incoming Calls		
3: Missed Calls		
4: All Recent		
6: CONTACTS		
1: Find		
2: Add New Entry		
3: Speed Dial #s		
2 – 99		
4: Group		
1: Unassigned		
2: Family		
3: Friends		
4: Colleague		

<b>5: VIPs</b>
<b>6: Empty</b>
<b>5: Services</b>
<b>1: Customer Care</b>
<b>611</b>
<b>2: Air Time Top-Up</b>
<b>222</b>
<b>3: Dir Assist</b>
<b>411</b>
<b>6: My Phone #</b>
<b>IN USE MENU</b>
<b>Press Options (right softkey) to display the following options:</b>
<b>1: Call History</b>
<b>2: Contacts</b>
<b>3: 3-Way Call</b>
<b>4: Messaging</b>
<b>5: Voice Memo</b>
<b>6: Tools</b>
<b>7: Phone Info</b>



**Section 1**

# **Getting Started**

**SAMSUNG**



# Setting Up Service

## In This Section

---

- ◆ Getting Started With Your Service
  - ◆ Setting Up Your Voicemail
  - ◆ Getting Help
- 

**Setting up service on your new Samsung a420 phone is quick and easy.** This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Customer Care.

# Getting Started With Your Service




---

## Determining if Your Phone is Already Activated

If you purchased your phone at a partner store, it is probably activated, unlocked, and ready to use. If you received your phone in the mail, you will need to call Customer Care in order to activate your phone. By activating the phone you are agreeing to all of Trumpet Mobile's terms and conditions of service. These terms and conditions are available at [trumpetmobile.com](http://trumpetmobile.com). Customer Care will walk you through the one time subsidy lock code process.

## Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press  to turn the phone on.
2. From standby mode, press , **Left/Right softkey**, **Volume** key, or .
3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)



### Tip:

If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these works, call Trumpet Mobile Customer Care at 1-877-TRUMPET.

## Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

### To set up your voicemail:

1. From standby mode, press and hold .
2. Follow the system prompts to:
  - Create your passcode
  - Record your name announcement
  - Record your greeting
  - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode)

**Note:****Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Trumpet Mobile recommends you enable your voicemail passcode.

For more information about using your voicemail, see “Using Voicemail” on page 98.

## Getting Help

---




### Visit [www.trumpetmobile.com](http://www.trumpetmobile.com)

You can go online to:

- Access your account information
- Check your minutes used (depending on your Trumpet Mobile Service Plan)
- View available Trumpet Mobile Service Plans and options

### Reaching Trumpet Mobile Customer Care

You can reach Trumpet Mobile Customer Care many different ways:

- Dial     on your phone
- Sign on to your account at [www.trumpetmobile.com](http://www.trumpetmobile.com)
- Call us toll-free at 1-877-TRUMPET
- Write to us at Trumpet Mobile  
Customer Care  
P.O. Box 2067  
Manhattan Beach, CA 90267

### Trumpet Mobile 411

You have access to a variety of services and information through Trumpet Mobile 411, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Trumpet Mobile 411 and you will be billed for airtime.

To call Trumpet Mobile 411:

▶ Press    .

Setting Up Service





**Section 2**

# **Your Phone**

**SAMSUNG**



## Section 2A

# Your Phone: The Basics

### In This Section

---

- ♦ Front View of Your Phone
  - ♦ Viewing the Display Screen
  - ♦ Features of Your Phone
  - ♦ Turning Your Phone On and Off
  - ♦ Using Your Phone's Battery and Charger
  - ♦ Navigating Through Phone Menus
  - ♦ Displaying Your Phone Number
  - ♦ Making and Answering Calls
  - ♦ Entering Text
- 

**Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you.** This section will guide you through the basic functions and calling features of your phone.

## Front View of Your Phone

---



## Key Functions

1. **Speaker** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
2. **Display Screen** displays all the information needed to operate your phone, such as the call status, the contacts, the date and time and the signal and battery strength.
3. **Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
  - Press **Up** to access **Missed Alerts**.
  - Press **Down** to access **Scheduler**.
  - Press **Right** to launch **Text Inbox**.
  - Press **Left** to access the **Send Message**.  
(Keys can be reassigned to create customized shortcuts.)
4. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
5. **Left Softkey** allows you to select softkey actions or menu items corresponding to the bottom left line on the display screen.

**Note:** To select a softkey, press the softkey directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

6. **TALK Key** allows you to place or receive calls, answer Call Waiting, or activate Voice Dial.
7. **Volume Key** allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different

menu options. To mute the ringer during an incoming call, press the volume key up or down.

8. **Voicemail Key** allows you to press and hold to automatically dial your voicemail.
9. **Shift/Asterisk Key** enters the asterisk [\*] character for calling features. In text entry mode, press to change the capitalization mode.
10. **Plus Code Dialing Key** automatically dials the international access code for the country in which you are located (for instance, 011 for international calls placed from the United States).
11. **Power/Accessory Interface Connector** allows you to connect charging accessories and optional accessory cables to your phone.
12. **Microphone** allows other callers to hear you clearly when you are speaking to them.
13. **Space/Pound Key** enters the pound [#] character for calling features. In text entry mode, press to enter a space.
14. **Numeric Keypad** allows you to enter numbers, letters, and characters.
15. **BACK Key (Clear)** deletes characters from the display in text entry mode. When in a menu, press the Back key to return to the previous menu.
16. **Speaker Key** turns on or off the speaker phone.
17. **END Key (Power)** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.


18. **OK/MENU Key** allows you to access the menu screen. It also allows you to accept choices when navigating through a menu.
19. **Right Softkey** allows you to select softkey actions or menu items corresponding to the bottom right line on the display screen.

**Note:** To select a softkey, press the softkey directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

## Viewing the Display Screen

---

Your phone's display screen provides a wealth of information about your phone's status and options.

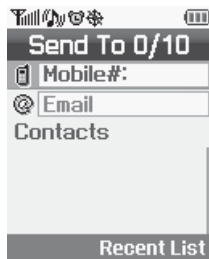

To view a list of your phone's icons and descriptions:

- ▶ Select **MENU > Settings > Phone Info > Icon Glossary**.



## Features of Your Phone

---

Congratulations on the purchase of your phone. The A420 by Samsung is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- SMS Text Messaging (page 107), provide quick and convenient messaging capabilities.
- The Contacts list allows you to store up to 299 entries, with up to five phone numbers per entry (page 75).
- The built-in Scheduler offers several personal information management features to help you manage your busy lifestyle (page 85).
- Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future (page 51).
- T9 Text Input lets you quickly type messages with one keypress per letter (page 37).
- Speed dial lets you dial phone numbers with one or two keypresses (page 35).

# Turning Your Phone On and Off

---

## Turning Your Phone On

To turn your phone on:

- ▶ Press and release .

Once your phone is on, it may display “Searching for Service,” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.


If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Trumpet Mobile Service by pressing any key (when your phone is turned on).

<b>Note:</b>	The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.
--------------	---

## Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

# Using Your Phone's Battery and Charger

---

## Warning!

Use only Trumpet Mobile-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Trumpet Mobile-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Trumpet Mobile- or manufacturer-approved batteries and accessories can be found at Partner Stores or through your phone's manufacturer, or call 1-866-343-1114 to order. They're also available at [www.trumpetmobile.com](http://www.trumpetmobile.com) – click the **Wireless** link under “Personal,” and then click **Accessories** under “Shop Trumpet Mobile Online.”

## Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.5 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

## Note:

Long backlight settings, searching for service and vibrate mode affect the battery's talk and standby times.


## Tip:

Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

## Installing the Battery

To install the Li-Ion battery:

1. Insert the battery into the opening on the back of the phone at a 45-degree angle, making sure to line up the gold contacts. Gently press down until it snaps into place.
2. Install the protective cover by lining up the tabs at a 45-degree angle and gently press up until the cover snaps into place.

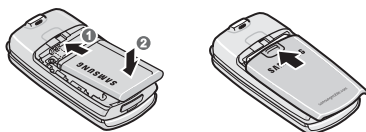

## Removing the Battery


To remove your battery:

1. Remove the protective cover by pressing down on the back of the cover.
2. Grip the battery at the bottom and pull up and out at a 45-degree angle.



## Charging the Battery

Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (  ) blinks and the phone sounds a warning tone.

Always use a Trumpet Mobile-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

### Warning!

Using the wrong battery charger could cause damage to your phone and void the warranty.

## Using the Travel Charger

To use the travel charger provided with your phone:

- ▶ Plug the end of the AC adapter into the phone's power interface connector and the other end into an electrical outlet.
  - A **red indicator light** on the phone lets you know the battery is charging.
  - A **green indicator light** on the phone indicates that the battery is fully charged.
  - An **onscreen indicator** lets you know that the battery is charged.

It takes about three hours to fully recharge a completely rundown battery.

## **UL Certified Travel Adapter**

The Travel Adapter for this phone has met UL 1310 safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS. FOR CONNECTION TO A SUPPLY NOT IN THE U.S.A., USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION

## Navigating Through Phone Menus

The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page iii.

### Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing **MENU OK**.

For example, if you want to view your last incoming call:

1. Select **MENU** (**MENU OK**) to access the main menu.
2. Select **Call History** by pressing **5 JKL** or by highlighting it and pressing **MENU OK**.
3. Select **Incoming Calls** by pressing **2 ABC** or by highlighting it and pressing **MENU OK**. (If you have received any calls, they are displayed on the screen.)

**Note:** For the purposes of this guide, the above steps condense into "Select **MENU > Call History > Incoming Calls**."

## Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .



## Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:


- ▶ Select **MENU > Settings > Phone Info > Phone Number**. (Your phone number and other information about your phone and account will be displayed.)

**Note:** To select Menu, press the menu key. To select menu options (such as Settings, above), highlight the option and press OK. (If the menu options are numbered, you may also select an option simply by pressing the corresponding number key.)


## Making and Answering Calls

### Holding Your Phone



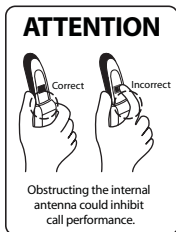

Since the antenna has been integrated into the design of the phone, it is important not to block the reception path accidentally to ensure the strongest signal possible is achieved. The orbital internal antenna is located near the hinge of your handset.



## Making Calls

Placing a call from your phone is as easy as making a call from any landline phone. Just enter the number, press , and you're on your way to clear calls.


**To make a call using your keypad:**

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press  to erase one digit at a time. Press and hold  to erase the entire number.)
3. Press .
4. Press  or close the phone when you are finished.

**Tip:** To redial your previous call, press **TALK** twice.

You can also place calls from your phone by using the Contacts menu (page 77), Voice Dial (page 118), speed dialing numbers from your Contacts (page 35), and using your Call History listings (page 72).

## Dialing Options


When you enter numbers in standby mode, select **Options** (  ) to see the following dialing options.

To initiate an option, press the corresponding softkey.

- **Speed Dial** (appears for the first three digits only) launches the Speed Dial function and dials the number assigned to the entered digits.
- **4-Digit Dial** (appears after you enter only four digits) dials the number or digits displayed. (See “Abbreviated Dialing” on page 59 for more information.)
- **Dial** dials the number or digits displayed.
- **Send Msg** (appears only after you enter four or more digits) allows you to send text messages to the number being dialed.
- **Save** allows you to enter a seven- or ten-digit number (phone number and area code) and press **Options** (right softkey) > **Save** to save the phone number in your Contacts. (See “Saving a Phone Number” on page 31.)
- **Find** allows you to enter a digit or string of digits, press **Options** (right softkey), and then press **Search** to display Contacts entries that contain the entered numbers. (See “Finding a Phone Number” on page 32.)
- **Hard Pause** allows you to enter a hard pause. To continue dialing, you must press a key. (See “Dialing and Saving Phone Numbers With Pauses” on page 33.)
- **2sec Pause** allows you to enter a two-second pause. The phone will pause and then continue dialing without any additional keys being pressed. (See “Dialing and Saving Phone Numbers With Pauses” on page 33.)

## Answering Calls

To answer an incoming call:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Call Answer Mode" on page 62 for more information.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

If Call Answer is set to **Talk Key**, the following options are also displayed. To select an option, press the corresponding softkey.

- **Answer** to answer the call.
- **Ignore** to send the call to your voicemail box.

**Tip:** To quiet the ringer, press the back, end, or volume key.

## Ending a Call



To disconnect a call when you are finished:

- ▶ Close the phone or press .


## Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.





**To display the Missed Call entry from the notification screen:**

- ▶ Highlight the entry and press . (To dial the phone number, press .)


**To display a Missed Call entry from standby mode:**


1. Select **MENU** > **Call History** > **Missed Calls**.
2. Highlight the entry you wish to view and press .

## Calling Emergency Numbers

You can place calls to 911 (dial    and press ) , even if your phone is locked or your account is restricted.




**Note:** When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call, press **Options** (right softkey) to display your options. To select an option, highlight it and press .


- **Unlock Phone** to unlock your phone (appears only if the phone is locked).
- **To close the pop-up menu** (appears only if the phone is unlocked), press the  key.

**Tip:** Press **Options** (right softkey) and then **Phone Info & Phone Number** to display your phone number during an emergency call.

To exit Emergency mode:

1. Press  to end a 911 call.
2. Press   until Emergency mode is exited.

## In-Call Options

Pressing **Options** (right softkey) during a call displays a list of features you may use during the course of a call. To select an option, press the corresponding keypad number or highlight the option and press . The following options are available through the Options menu:

<b>Warning!</b>	Due to higher volume levels, do not place the phone near your ear during monitor use.
-----------------	---

- **Call History** checks your call log for Outgoing, Incoming, Missed, and Recent calls. You can also erase the logs from this menu.
- **Contacts** accesses the Contacts menu.
- **3-Way Call** places the other phone on hold and displays the **3-way Call** screen, allowing you to dial a second number and join the new phone into a 3-way call.
- **Messaging** accesses the Messaging menu options.
- **Voice Memo** allows you to record incoming audio from your conversation. (For more information, see "Managing Voice Memos" on page 119.)
- **Tools** accesses the Tools menu options.
- **Phone Info** displays the following menu options:
  - Phone Number
  - Icon Glossary
  - Version
  - Advanced

During a call, the left softkey functions as the **Mute** button. Press it to mute the phone's microphone for privacy. Press it again to **Unmute** the phone.

## End-of-Call Options



After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. The left softkey displays the **Save** option. Select this option if you wish to add the new number to your Contacts. (See "Saving a Phone Number" below.)

After receiving a call from or making a call to a phone number that is already in your Contacts, the entry name and phone number and the duration of the call are displayed. The left softkey displays the **Call** option. Select this option if you wish to re-call the Contact.

## Saving a Phone Number





Your phone can store up to five phone numbers in each Contact entry up to a total of 299 phone numbers. Each entry's name can contain up to 20 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2F: Using Contacts on page 75.)

**To save a number from standby mode:**

1. Enter a phone number and press .
2. Select **New Entry** or **Existing Entry** and press .

**Note:** The **New Entry** screen does not display for the first entry saved in the contacts. Skip to step 3 if you are entering the first number in the contacts.




**Note:** If **Existing Entry** was selected, press **OK** to launch the **Find** screen. Locate the desired contact and add the additional number to the selected entry.

3. Use your navigation key to select a label (**Mobile**, **Home**, **Work**, **Pager**, or **Others**) and press .
4. Enter a name for the entry using the numeric keys. Press  to select the desired entry method **T9(English)**, **Alpha**, **Symbol**, or **Number**. (See “Entering Text” on page 36.)
5. When you have finished entering the name, press  to return to the contact entry.
6. Press  for **Done** to save the entry.

## Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

**To find a phone number:**

1. While in standby mode, enter three or more of the last digits of the phone number. (The more numbers you enter, the more specific the search becomes.)
2. Press **Options** () and select **Find**. (All Contacts entries matching the entered numbers will be displayed.)
3. To display the Contacts entry that contains the phone number you entered, highlight the entry and press . To dial the number, press .



## Dialing and Saving Phone Numbers With Pauses



You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:


- **Hard Pause** sends the next set of numbers when you press the left softkey.
- **2-Second Pause** automatically sends the next set of numbers after two seconds.

**Note:** You can have multiple pauses in a phone number and combine two-second and hard pauses.

**To dial or save phone numbers with pauses:**

1. Enter the phone number.
2. Press **Options** (  ) and select either **Hard Pause** or **2sec Pause**.
3. Enter additional numbers.
4. Press .

— or —



Press **Options** (  ) > **Save** to save the number in your Contacts.

**Note** When dialing a number with a hard pause, press the **Talk** to send the next set of numbers.

## Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls placed from the United States).

**To make a call using Plus Code Dialing:**

1. Press and hold  until a “+” appears on your phone display.
2. Dial the country code and phone number you’re calling and press . (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)


## Dialing From the Contacts List



**To dial directly from a Contacts entry:**

1. Select **MENU > Contacts > Find**.

### Shortcut:

Press **Contacts** (right softkey) to list entries.

2. Highlight the entry you want to call and press .  
— or —

To dial another number from the entry, highlight the name and press ; highlight the number you wish to call, and press .

## Using Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a button or two. With this feature, you can dial speed dial entries using one keypress for locations 2 – 9 or two key presses for locations 10 – 99.

### To use One-Touch Dialing for speed dial locations 2 – 9:

- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that the number has been dialed when it shows the name and number of the speed dial.

### To use Two-Touch Dialing for speed dial locations 10 – 99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that the number has been dialed when it shows the name and number of the speed dial.

# Entering Text

---

## Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or SMS Text Messaging).

**To change the character input mode:**

1. When you display a screen where you can enter text, press the right softkey to change the character input mode.
2. Select one of the following options:
  - **T9(English)** to enter text using a predictive text entering system that reduces the number of keys that need to be pressed while entering a word (see page 37).
  - **Alpha** to cycle through the alpha characters associated with the letters on the keypad (see page 38).
  - **Symbol** to enter symbols (see page 39).
  - **Number** to enter numbers by pressing the numbers on the keypad (see page 39).
  - **Preset Msg** to enter preprogrammed messages (see page 39).
  - **Recent Msg** to enter a message from a list of previous messages.
  - **Emoticons** to enter “emoticons” (see page 39).

**Tip:**





 

When entering text, press the \* (Shift) key to change letter capitalization (**Abc** > **ABC** > **abc**).



## Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 36.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)







**To enter a word using T9(English) Text Input:**

1. Select the **T9(English)** character input mode. (See “Selecting a Character Input Mode” on page 36.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press     .) (If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.)

If the word you want is not displayed after you have entered all the letters, press  to scroll through additional word selections. To accept a word and insert a space, press .













## Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad:

1. Select the **Alpha** mode. (See “Selecting a Character Input Mode” on page 36.)
2. Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word “Bill,” press  twice,  three times,  three times, and  three times again.) (If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.)

By default, the first letter of an entry is capitalized and the following letters are lower cased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

	. , @ 1 ? ! * # /		P Q R S 7
	A B C 2		T U V 8
	D E F 3		W X Y Z 9
	G H I 4		0
	J K L 5		Space
	M N O 6		Shift

## Entering Numbers, Symbols, Smileys, and Preset Messages

To enter numbers:

- ▶ Select the **Number** mode and press the appropriate key.  
(See “Selecting a Character Input Mode” on page 36.)


To enter symbols:

- ▶ Select the **Symbols** mode. (See “Selecting a Character Input Mode” on page 36.) To enter a symbol, press the appropriate key indicated on the display.

To enter “emoticons” (smileys):

- ▶ Select the **Emoticons** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 36.)

To enter preset messages:

1. Select the **Preset Msg** mode. (See “Selecting a Character Input Mode” on page 36.)
2. Scroll to the desired preprogrammed message and press .

### Note:

Preset messages make composing text messages even easier by allowing you to enter preset messages, such as “Meet me at,” “Let’s get lunch,” or a customized preset message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 53.)





## Section 2B

# Controlling Your Phone's Settings

### In This Section

---

- ◆ Sound Settings
  - ◆ Display Settings
  - ◆ Location Settings
  - ◆ Messaging Settings
  - ◆ Airplane Mode
  - ◆ TTY Use With Trumpet Mobile Service
  - ◆ Phone Setup Options
  - ◆ Call Setup Options
- 

**Using the menu options available on your phone, you can customize your phone to sound, look, and operate just the way you want it to.** This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

# Sound Settings

---

## Ringer Types



Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.

## Selecting Ringer Types for Voice Calls



Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for voice calls:

1. Select **MENU > Settings > Sounds > Ringer Type > Voice Calls**.
2. Select **With Caller ID** or **No Caller ID**.
3. Select **Melodies**, **Single Tones**, or **Ring Tones** and press . (The list of ringers is displayed.)
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press .



## Selecting Ringer Types for Messages

To select a ringer type for messages:

1. Select **MENU > Settings > Sounds > Ringer Type > Messages**.
2. Select **Vicemail** or **Text Message**.
3. Select **Single Tones**, **Ring Tones** or **Melodies** and press . (The list of preprogrammed ringers is displayed.)
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press  to assign the desired ringer.

## Selecting Ringer Types for Schedule



To select a ringer type for schedule:

1. Select **MENU > Settings > Sounds > Ringer Type > Schedule**.
2. Select **Melodies**, **Ring Tones** or **Single Tones** and press . (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign the desired ringer.

## Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)



To select a key tone:

1. Select **MENU > Settings > Sounds > Key Tone**.
2. Select **Tone Type** and press .
3. Select **Xylophone, DTMF, or Simple** and press .

## Tone Level

Your phone allows you to set the desired volume level of the key tones.


To set the key tone level:

1. Select **MENU > Settings > Sounds > Key Tone > Tone Level**.
2. Press  left or right until you hear the desired tone level and press .

## Key Tone Length

The key tone length allows you to choose between short or long tones when pressing a key. Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.


To set the key tone length:

1. Select **MENU > Settings > Sounds > Key Tone > Tone Length**.
2. Select **Short or Long** and press .

## Adjusting the Phone's Ringer Volume

You can adjust your phone's ringer volume to suit your needs and your environment.

To adjust your phone's ringer volume:

1. Select **MENU** > **Settings** > **Sounds** > **Volume**.
2. Select **Ringer**.
3. Use the navigation key to choose a volume level and select **Done** (  ). (Select **Vibrate** to make the ringer vibrate at any volume level.)



**Tip:**

You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key on the left side of your phone.

## Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

 
To adjust your phone's volume settings:

1. Select **MENU** > **Settings** > **Sounds** > **Volume**.
2. Select **Messages**, **Voicemail** or **Alarms**, and press .
3. Select **Use Ringer Volume** to use the ringer settings or select **Separate Volume**.
4. Use the navigation key to choose a volume level and select **Done** (  ). (Select **Vibrate** to make the ringer vibrate at any volume level.)

## Alert Notification

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, when the signal fades, when powering your phone on or off, or when a call has been connected.

**To enable or disable alert sounds:**

1. Select **MENU > Settings > Sounds > Alerts**.
2. Select **Minute Beep, Service, Connect, Sig. Fade Tone**, or **Power On/Off** and press .

**Note:** If **Power On/Off** is selected, choose **On** or **Off** and press **OK**.

3. Select **On** or **Off** and press .

## Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

**To activate Silence All:**

- ▶ With the phone open, press and hold the volume key down in standby mode. (The screen will display "Silence All.")

**To deactivate Silence All:**




- ▶ Press the volume key up repeatedly to select a desired volume level.

# Display Settings

## Changing the Text Greeting

The text greeting can be up to 14 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting ("Trumpet Mobile"), or you may enter your own custom greeting.


To display or change your greeting:

1. Select **MENU > Settings > Display > Greeting**.
2. Enter a custom greeting using your keypad and press . (See "Entering Text" on page 36.) (To erase the existing greeting one character at a time, press . To erase the entire greeting, press and hold .)


## Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any keypress is made.

To change the backlight setting:

1. Select **MENU > Settings > Display > Backlight > Main Display**.
2. Select a time setting and press .

To change the keypad setting:


1. Select **MENU > Settings > Display > Backlight > Keypad**.
2. Select a time setting and press .

**Note:** Long backlight settings affect the battery's talk and standby times.

## Changing the Display Screen

Your new phone offers options for what you see on the display screen and when in standby mode.


**To change the display images on main LCD:**

1. Select **MENU > Settings > Display > Screen Saver**.
2. Choose the desired image and press  to assign it as a screen saver.

## Changing the Brightness

You can adjust your screen's brightness to suit your surroundings.


**To adjust the display's contrast:**

1. Select **MENU > Settings > Display > Backlight > Brightness**.
2. Press your navigation key up or down to adjust the brightness and select **Done** (.

## Changing the Phone's Menu Style

Your phone allows you to choose how the menu appears on your display screen.

**To select the display's menu style:**

1. Select **MENU > Settings > Display > Menu Style**.
2. Select **Grid Style** to view each main menu item as an animated, single screen icon or **List Style** to view the main menu as a list and press .



## Changing the Font Color

You can customize your phone's display font by selecting a color scheme or style to reflect your personality.


To change the display's theme color:

1. Select **MENU > Settings > Display > Dialing Font > Color**.
2. Select **Basic**, **Rainbow**, **Monochrome**, or **Hyphenate** and press .

## Changing the Dialing Font

This setting allows you to adjust the display appearance when dialing phone numbers.


To change the dialing font:

1. Select **MENU > Settings > Display > Dialing Font > Size**.
2. Select **Large**, **Normal**, or **Small** and press .

## Changing the Power Save Mode

The Power Save feature helps to conserve your battery power by turning off the keypad backlight and dimming the display backlight.

To change the Power Save Mode:

1. Select **MENU > Settings > Display > Backlight > Pwr Save Mode**.
2. Select **On** or **Off** and press .

## Changing the Service Light

The Service Light feature alerts you visually to your phone's status (indicating incoming calls and messages, alarms, and battery charging) when the flip is closed.

To change the **Service Light**:

1. Select **MENU > Settings > Display > Service Light**.
2. Select **On** or **Off** and press .



## Location Settings



Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network Trumpet Mobile makes available to you to detect your position. Turning Location off will hide your location from everyone except 911.

**Note:** Turning Location on will allow the network Trumpet Mobile makes available to you to detect your position using GPS technology, making some Trumpet Mobile applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

**To enable your phone's Location feature:**

1. Select **MENU > Settings > Others > Location**. (The Location disclaimer is displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off** press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

## Messaging Settings

---



Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of text messages without placing a voice call.

Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own canned messages, to name just a few.

### Setting Message Alerts

When new messages arrive, you can choose to have your phone notify you by playing an audible alert.


**To hear an alert when you receive a new message:**

1. Select **MENU > Messaging > Settings > Message Alerts**.
2. Select **Alert Volume, Alert Type, or Reminder** and press .
3. Select the desired options and press .

### Deleting Old Messages

You can delete messages that you've already read whenever you like, or you can have your phone delete them automatically for you when your phone's message memory becomes full.




**To automatically delete read messages:**

1. Select **MENU > Messaging > Settings > Auto Erase**.
2. Select **Yes or No** and press .

## Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.


To add a customized signature to each sent message:

1. Select **MENU** > **Messaging** > **Settings** > **Edit Signature**.
2. Select **On** and press . (If you do not wish to attach a signature to your outgoing messages, select **Off** and press .)
3. Enter your signature and press **Done** (  ). (See “Entering Text” on page 36.)


## Managing Preset Messages

Your phone is programmed with 10 preset messages to help make sending text messages faster and easier. These messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at,” can be customized or deleted to suit your needs. You can even add your own preset messages to the list (up to 20 messages total).



To edit or delete a preset message:

1. Select **MENU** > **Messaging** > **Settings** > **Preset Messages**. (The list of preset messages is displayed.)
2. To edit or delete a preset message, highlight it and press **Edit** (  ). (See “Entering Text” on page 36.)

— or —

Select **Options** (  ), and then select **Erase** to delete the selected message. Select **Yes** to confirm. (Select **No** to cancel the deletion.)

To add a new preset message:



1. Select **MENU > Messaging > Settings > Preset Messages**. (The list of preset messages is displayed.)
2. To add a new message, select the desired message location, press **Options** (  ) and select **Add New**.
3. Enter your message (see “Entering Text” on page 36), and press . (Your new message will be added to the beginning of the list.)

## Airplane Mode

---

Airplane Mode allows you to use many of your phone's features, such as Memo Pad and Voice Memos when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

**To set your phone to Airplane Mode:**

1. Select **MENU > Settings > Others > Airplane Mode**.
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .





While in Airplane Mode, your phone's standby screen will display "Phone off."

## TTY Use With Trumpet Mobile Service



---

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Trumpet Mobile Service, please call Trumpet Mobile Customer Care via the state Telecommunications Relay Service (TRS) by first dialing     . Then provide the state TRS with this number: 888-774-2000.

**To turn TTY Options on or off:**

1. Press **MENU > Settings > Others > TTY Mode** from standby mode. (An informational message is displayed.)
2. Press .
3. Select **TTY Off**, **TTY + Hear**, **TTY+ Talk** or **TTY Full** and press .



**Note:**

In TTY Mode, your phone will display the TTY access icon when a headset or TTY device is plugged in.

---

**If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.**

**WARNING****911 Emergency Calling**

Trumpet Mobile recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

## Phone Setup Options

---

### Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Select **MENU > Settings > Others > Language**.
2. Select **English** or **Español** and press .

## Call Setup Options



Call Setup options allow you to set up the following options:

- **Abbreviated Dial** allows you to program a five- or six-digit prefix for commonly used phone numbers (page 59).
- **Contacts Match** allows you to turn on or off the contacts matching feature (page 60).
- **Restriction** allows you to restrict outgoing calls (page 61).
- **Call Answer** allows you to set up how you answer incoming calls (page 62).
- **Auto Answer** allows you to answer incoming calls automatically with the optional hands-free car kit (page 62).

### Abbreviated Dialing

Abbreviated dialing allows you to program a five- or six-digit prefix for commonly used phone numbers. When abbreviated dialing is on, you can enter the last four or five digits of any phone number that matches the five- or six-digit prefix, and the number is dialed.

To set up abbreviated dialing:


1. Select **MENU > Settings > Others > Call Setup > Abbrev. Dial**.
2. Select **On** or **Off** and press .
3. If you select **On**, input the five- or six-digit prefix (for example, area code and prefix) and press .

## Making an Abbreviated Dial Call

To make a call:

1. Enter the last four or five digits of the prefix phone number.
2. Abbrev. Dial is displayed in the lower left corner with the prefix digits displayed.


**Note:** If there is more than one Contact entry that matches the last four or five digits, a list is displayed which allows you to select the desired number to call.

3. Press  to make the call.

## Contact Match

With the Contact Match feature, your phone displays the contact's name and phone number if the incoming call or outgoing call is in your Contacts list.

To access **Contact Match**:



1. Select **MENU > Settings > Others > Call Setup > Contact Match**.
2. Select **On** or **Off** and press .

## Restriction


Allows you to restrict outgoing call options by selecting one of the following options:

- **Allow all** to allow outgoing calls to be made (no restrictions).
- **Contacts Only** to allow outgoing calls to only those numbers saved in the Contacts list.
- **Special# Only** to allow outgoing calls to only the numbers set up in the special numbers list. (See “Using Special Numbers” on page 66.)



To access call restriction:

1. Select **MENU > Settings > Others > Call Setup > Restriction**.
2. Enter your lock code.
3. Select **Outgoing Call** and press .
4. Select **Allow all**, **Contacts Only**, or **Special# Only** and press .

## Call Answer Mode

You can determine how to answer incoming calls on your phone, whether by pressing , by pressing any number key, or simply by opening the phone.


To set call answer mode:

1. Select **MENU > Settings > Others > Call Setup > Call Answer**.
2. To select an option, highlight it and press .
  - **Any Key** to allow an incoming call to be answered by opening the phone or pressing any key.
  - **Talk Key** to require  to be pressed to answer all incoming calls.
  - **Flip Open** to answer the call when the phone is opened.

## Auto Answer Mode

You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit.

To set Auto Answer mode:

1. Select **MENU > Settings > Others > Call Setup > Auto Answer**.
2. To select an option, highlight it and press .
  - **CarKit/Headset** select **Yes** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto Answer mode even if you are not present.

# Setting Your Phone's Security

### In This Section

---

- ♦ Accessing the Security Menu
  - ♦ Using Your Phone's Lock Feature
  - ♦ Using Special Numbers
  - ♦ Erasing Contacts
  - ♦ Resetting Your Phone
- 

**By using the security settings on your phone, you receive peace of mind without sacrificing flexibility.** This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

## Accessing the Security Menu

---

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select **MENU > Settings > Security**.
2. Enter your lock code to display the Security menu.

<b>Tip:</b>	If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these works, call Trumpet Mobile Customer Care at 1-877-TRUMPET.
-------------	--


 
## Using Your Phone's Lock Feature

---

### Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Trumpet Mobile Customer Care, or special numbers. (See "Using Special Numbers" on page 66.)

To lock your phone:

1. From the Security menu, select **Lock Phone**.
2. Highlight **Lock Now** and press . (To set your phone to lock the next time it is turned on, select **On Power-up** and press .)



## Unlocking Your Phone

To unlock your phone:

1. From standby mode, press **Talk**, **Left/Right softkey**, **Volume** key, or **OK** key.
2. Enter your lock code.

## Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 66.)

To place an outgoing call in lock mode:

- ▶ To call an emergency number, special number, or Trumpet Mobile Customer Care, enter the phone number and press



## Changing the Lock Code

To change your lock code:

1. Select **MENU > Settings > Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Change Lock**.
4. Enter your new lock code and press **Next** ( ).
5. Re-enter your new lock code and press **Done** ( ).



## Using Special Numbers

---

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to three special numbers in addition to your Contacts entries. (The same number may be in both directories.)

**To add or replace a special number:**

1. Select **MENU > Settings > Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Special #**.
4. Select a location for your entry and press .
5. Enter the number and press .

 
**Note:** There are no speed dial options associated with special numbers.

## Erasing Contacts

---

You can quickly and easily erase all the contents of your Contacts list.

**To erase all the names and numbers in your Contacts:**

1. Select **MENU > Settings > Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Erase Contacts** and press .

4. If you are certain you would like to erase all of your Contacts entries, select **Yes** and press **MENU OK**.

## Resetting Your Phone

---

Resetting the phone restores all the factory defaults, including the ringer types and display settings. (Contacts are not affected when resetting your phone.)

To reset your phone:

1. Select **MENU > Settings > Security**.
2. Enter your lock code. (The Security menu is displayed.)
3. Select **Reset Phone** and press **MENU OK**.
4. If you are certain that you would like to restore all the factory settings, select **Yes** and press **MENU OK**.



## Section 2D

# Managing Call History

### In This Section

---

- ♦ Viewing History
  - ♦ Call History Options
  - ♦ Making a Call From Call History
  - ♦ Saving a Phone Number From Call History
  - ♦ Prepending a Phone Number From Call History
  - ♦ Erasing Call History
- 

**The Call History keeps track of incoming calls, calls made from your phone, and missed calls.** This section guides you through accessing and making the most of your Call History.


 
## Viewing History

---



You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

**To view a Call History entry:**

1. Select **MENU > Call History**.
2. Select **Outgoing Calls, Incoming Calls, Missed Calls,** or **All Recent** and press .
3. Highlight the entry you wish to view and press .

## Call History Options

For additional information and options on a particular call, highlight a Call History entry and press . This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing **Options** (), you can select from the following options:

- **Send Msg** to send a text message to the number displayed on screen (“Using SMS Text Messaging” on page 107.)
- **Save** to save the number if it is not already in your Contacts. (See “Saving a Phone Number From Call History” on page 73.)
- **Prepend** to add numbers to the beginning of the selected number. (See “Prepending a Phone Number From Call History” on page 74.)
- **Erase** to delete the entry (page 74).



**Tip:**

You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.


## Making a Call From Call History

---

To place a call from Call History:

1. Select **MENU > Call History**.
2. Select **Outgoing Calls, Incoming Calls, Missed Calls,** or **All Recent** and press .
3. Use your navigation key to select a Call History entry and press .

**Note:** You cannot make calls from Call History to entries identified as **No Caller ID, Unknown,** or **Restricted**.








4. Select **Call** (  ) to call the selected number.



## Saving a Phone Number From Call History

Contacts entries can store up to a total of five phone numbers, and each entry's name can contain 20 characters.

To save a phone number from Call History:

1. Select **MENU > Call History > Outgoing Calls, Incoming Calls, Missed Calls, or All Recent** and press .
2. Use your navigation key to select the desired entry and select **Options** (  ).
3. Select **Save** and press .
4. Select **New Entry** and press .
5. Select a label and press .
6. Enter a name for the entry using the keypad and press .
7. Select **Done** (  ) to save and exit.

After you have saved the number, the Find screen is displayed. (See “Finding Contacts Entries” on page 77.)





**Note:** You cannot save phone numbers already in your Contacts or from calls identified as **No Caller ID**, **Unknown**, or **Restricted**.

## Prepending a Phone Number From Call History

---

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

**To prepend a phone number from Call History:**




1. Select **MENU > Call History**.
2. Select **Outgoing Calls, Incoming Calls, Missed Calls, or All Recent** and press .
3. Select a Call History entry, select the number or the name and press .
4. Press **Options** (  ) and select **Prepend**.
5. Enter the prefix and press .

## Erasing Call History

---

To erase individual Call History entries, see “Call History Options” on page 71.

**To erase Call History:**

1. Select **MENU > Call History**.
2. Select **Outgoing Calls, Incoming Calls, Missed Calls, or All Recent** and press .
3. Press **Options** (  ) and select **Erase** for the highlighted entry or **Erase All** for all entries and press .

# Using Contacts

### In This Section

---

- ♦ Adding a New Contacts Entry
  - ♦ Finding Contacts Entries
  - ♦ Contacts Entry Options
  - ♦ Adding a Phone Number to a Contacts Entry
  - ♦ Editing a Contacts Entry's Phone Number
  - ♦ Assigning Speed Dial Numbers
  - ♦ Editing a Contacts Entry
  - ♦ Selecting a Ringer Type for an Entry
  - ♦ Dialing Trumpet Mobile Services
- 

**Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features.** This section explains how to use your phone's Contacts and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

## Adding a New Contacts Entry

---

Your phone's Contacts list can store up to 299 entries and each entry's name can contain 20 characters.

To add a new entry:



1. Select **MENU > Contacts > Add New Entry**.

**Shortcut:**

Press **Contacts** and press **Add New**. Proceed with steps 2 – 5.

**Tip:**

You can also enter the phone number in standby mode, press **OK**, select **New Entry**, and press **OK**. Proceed with steps 2 – 5.

2. Enter a name for the new entry and press the navigation key down. (See “Entering Text” on page 36.)
3. Highlight the desired label entry (**Mobile**, **Home**, **Work**, **Pager**, or **Others**) and enter the phone number.
4. Select **OK** (  ).
5. Select **Done** (  ).

After you have saved the number, the Find entry screen is displayed. (See “Finding Contacts Entries” on page 77.)

## Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by speed dial number, and by group. Follow the steps outlined in the sections below to display entries from the Contacts menu.

### Finding Names

To find Contacts entries by name:

1. Select **MENU > Contacts > Find**.


#### Shortcut:


From standby mode, press **Contacts** (right softkey) to display the Contacts menu.

2. Scroll through all the entries using your navigation key.

— or —

Enter the first letter of a name or part of a name (such as “ave” for “Dave”). (The more letters you enter, the more your search narrows.)

3. To display an entry, highlight it and press .

4. To dial the entry's default phone number, press .

— or —

To display additional Contacts entries, press the navigation key left or right.



## Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Select **MENU > Contacts > Speed Dial #s**.
2. Scroll through speed dial entries using your navigation key. Speed dial numbers are displayed in numeric order.



— or —

Enter the number of a speed dial location using your keypad.

3. To display an entry, highlight it and press .
4. To dial the entry's default phone number, press .

## Finding Group Entries

To find entries designated as part of a group:

1. Select **MENU > Contacts > Group**.
2. Scroll through the group titles using your navigation key. To display entries belonging to a group, highlight the group and press .
3. Navigate through the group to find the desired contact.
4. To dial the entry's default phone number, press .

## Contacts Entry Options

---

To access a Contacts entry's options, highlight the entry and press . Press **Options** () > **Edit**. Highlight one of the options listed below and press .





- **[Contact Name]** to edit the contact entry name.
- **[Mobile/Home/Work/Pager/Others]** to add a phone number to the entry. (See “Adding a Phone Number to a Contacts Entry” on page 80.)
- **[E-mail]** to add an email address to the entry.
- **[Memo]** to add a short text description about the contact.
- **[Group]** to assign the entry to a group.
- **[Ring]** to assign a preprogrammed ringer.
- **[Image]** to assign a preset image to the contact entry.

**Tip:** You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

## Adding a Phone Number to a Contacts Entry

---








To add a phone number to an entry:

1. Highlight a Contacts entry (see “Finding Contacts Entries” on page 77) and press  to display a Contacts entry.
2. Press **Options** (  ) > **Edit**.
3. Highlight the desired label, enter the new phone number, and press **OK** (  ).
4. Press **Done** (  ) to save the new number.

## Editing a Contacts Entry's Phone Number

---

To edit an entry's phone number:

1. Highlight a Contacts entry (see page 77) and press  to display a Contacts entry.
2. Press **Options** (  ) > **Edit**.
3. Highlight the number you wish to edit and press .
4. Press  to clear one digit at a time, or press and hold  to erase the whole number.
5. Re-enter or edit the number and press .
6. Press **Done** (  ) to save the number.




## Assigning Speed Dial Numbers




Your phone can store up to 98 phone numbers in speed dial locations. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 35.

Speed dial numbers can be assigned when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

**To assign a speed dial number to a new or existing phone number:**

1. Add a phone number to a new or existing Contacts entry. (See “Adding a New Contacts Entry” on page 76 or “Adding a Phone Number to a Contacts Entry” on page 80.)
2. Highlight the number and press **Options** (  ).

**Note:** If you select a location that already has a speed dial entry associated, you can press **Edit** to overwrite the location.





3. Select **Speed Dial** and press .
4. Select an available speed dial location and press .
5. Press **Done** (  ) to return to the Contacts menu.

**Note:** If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to replace the existing speed dial assignment. Select Yes to assign the location to the new phone number and delete the previous speed dial assignment.

## Editing a Contacts Entry

---

To make changes to an entry:






1. Display a Contacts entry and highlight the name of the person you wish to edit.
2. Press **Options** (  ) > **Edit**.
3. Highlight the part of the entry you wish to edit (**Name**, **Group**, **Ringer**, etc.) and press .
4. Add and/or edit the desired information and press .
5. Press **Done** (  ) to save your changes.

## Selecting a Ringer Type for an Entry

---

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 42.)


To select a ringer type for an entry:

1. Display a Contacts entry and highlight the name of the person you wish to edit.
2. Press **Options** (  ) > **Edit**.
3. Highlight the current ringer type and press .
4. Select the desired ringer category and press .
5. Use your navigation key to scroll through available ringers. (When you highlight a ringer type, a sample ringer will sound.)
6. Highlight your desired ringer and press .
7. Press **Done** (  ) to save the new ringer type.











## Dialing Trumpet Mobile Services

Your Contacts list is preprogrammed with contact numbers for various Trumpet Mobile Services.

To dial a service from your Contacts:

1. Select **MENU > Contacts > Services**.
2. Select **Customer Care**, **Airtime Top-Up**, or **Dir Assist**.
3. Press  to place the call.

To dial a service from standby mode using your keypad:

1. Dial the appropriate service number:
  - **Customer Care** –   
  - **Airtime Top-Up** –   
  - **Dir Assist** –   
2. Press  to place the call.



## Section 2F

# Using the Phone's Scheduler and Tools

### In This Section

---

- ♦ Using Your Phone's Scheduler
  - ♦ Using Your Phone's Alarm Clock
  - ♦ Using Your Phone's Memo Pad
  - ♦ Using Your Phone's Tools
- 

**Your phone is equipped with several personal information management features that help you manage your busy lifestyle.** This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

# Using Your Phone's Scheduler

---

## Adding an Event to the Scheduler


Your Scheduler helps organize your time and reminds you of important events.

To add an event:

1. Select **MENU** > **Tools** > **Scheduler**.

### Shortcut:

Press the navigation key down. Proceed with steps 2 – 8.

2. Using your navigation key, highlight the day to which you would like to add an event and press .


### Tip:


Press the navigation key up or down to scroll by week through the Scheduler.

3. Select **Options** (  ) > **Add New** (  ).

### Note:

If there are not any events scheduled for the selected day, the **New Event** screen is automatically displayed.

4. Enter a title for the event and press **Next** (  ). (See “Entering Text” on page 36.)
5. Select an initial time and date for the event by entering the **Start time** and **Date**.
  - Using your keypad, enter the start time and date for the event.
6. Select an end time and date for the event by highlighting the **End time** and **Date**.
  - Using your keypad, enter the end time and date for the event.


7. Select an alarm time for the event by highlighting the alarm field and pressing the navigation key left or right to select one of the following:
  - **No Alarm, On Time, 10min before, 30min before, or 1 Hr before.**
8. Select **Done** (  ) to save and exit.

## Event Alerts

There are several ways your phone alerts you to scheduled events:


- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

## Event Alert Menu


When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. To silence the alarm and reset the schedule, press .

## Viewing Events

To view your scheduled events:

1. Select **MENU > Tools > Scheduler**.
2. Using your navigation key, select the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order.)

**Tip:** In the Scheduler view, days with events scheduled are highlighted.

3. To display the details of an event listed in the schedule, highlight it and press .

## Going to Today's Scheduler Menu

To go to the Scheduler menu for today's date:

- ▶ Select **MENU > Tools > Today**.


## Erasing a Day's Events

To erase a day's scheduled events:

1. Select **MENU > Tools > Scheduler**.


### Shortcut:

Press the navigation key down. Proceed with steps 2 – 4.

2. Using your navigation key, highlight the day for which you would like to erase events and press .

### Tip:

In the Scheduler view, days with events scheduled are highlighted.

3. Press **Options** (  ) and select **Erase** or **Erase All**. (An alert will appear notifying you of the number of events to be erased.)
4. Select **Yes** to confirm or **No** to Cancel.





## Using Your Phone's Alarm Clock

---

Your phone comes with a built-in alarm clock with multiple alarm capabilities.

To use the alarm clock:

1. Select **MENU** > **Tools** > **Alarm Clock**.
2. Select **Alarm #1**, **Alarm #2**, or **Alarm #3** and press .
3. Turn the alarm on or off by highlighting the activation field.
  - Press the navigation key left or right to select **On** or **Off**.
4. Select a time for the alarm by highlighting the time field.
  - Use your keypad to enter an alarm time.
5. Select a ringer type for the alarm by highlighting the ringer field and pressing your navigation key left or right to select the desired ringer.
6. Select a repeating status for the alarm by highlighting the **Repeat** field.
  - Press the navigation key left or right to select **Once**, **Mon to Fri**, **Sat & Sun**, or **Daily**.
7. Select **Done** (.

## Using Your Phone's Memo Pad



---

Your phone comes with a memo pad you can use to compose and store reminders and notes to help keep you organized.


**To compose a note:**

1. Select **MENU > Tools > Memo Pad**.




**Note:** If there are no memos saved yet, the **New Memo** screen is automatically displayed.

2. Select **Options** (  ) > **Add New**.
3. Type your note using the numeric keypad and select **Done** (  ). (See “Entering Text” on page 36.)

**To read a saved note:**

1. Select **MENU > Tools > Memo Pad**.
2. Highlight a note and press .

**To delete saved notes:**

1. Select **MENU > Tools > Memo Pad**.
2. Highlight a note and select **Options** (  ).
3. Select **Erase** or **Erase All** and press .
4. Select **Yes** and press .

## Using Your Phone's Tools






---

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

### Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:




1. Select **MENU** > **Tools** > **Calculator**.
2. Enter the first number using your keypad.
  - Press the navigation key up for **Multiplication** (x).
  - Press the navigation key down for **Division** (÷).
  - Press the navigation key left for **Subtraction** (-).
  - Press the navigation key right for **Addition** (+).
  - Press  or  for a **decimal point**.
  - Press  for a **negative** number.
  - Press  to clear all numbers.
3. Enter the second number and press  for **Equals** (=).

## Task List

This option allows you to manage daily tasks that include dates, times, and priority levels.

1. Select **MENU > Tools > Task List**.

<b>Note:</b>	If there are no tasks saved, the <b>New Task</b> screen is automatically displayed.
--------------	---




2. Select **Options** (  ) > **Add New**.
3. Enter the task name using the keypad and press .
4. Select a due time by highlighting the **Due Time** field.
  - Using the keypad, enter the due time of the task.
5. Select a due date by highlighting the **Due Date** field.
  - Using the keypad, enter the due date of the task.
6. Select a Priority level by highlighting **Priority** field.
  - Press the navigation key left or right to select **Low** or **High**.
7. Select **Done** (  ) to save and exit.

## Countdown

This option allows you to enter a timer that counts down to an event based on a date and time specified.



1. Select **MENU > Tools > Countdown.**

**Note:** If there are no countdowns saved, the **New Countdown** screen is automatically displayed.

2. Select **Options** (  ) > **Add New.**
3. Enter the countdown name using the keypad and press .
4. Select a time by highlighting the **Time** field.
  - Using the keypad, enter the time of the countdown.
5. Select a date by highlighting the **Date** field.
  - Using the keypad, enter the date of the countdown.
6. Select **Done** (  ) to save and exit.

## World Time

To view the time in 24 different locations:

1. Select **MENU > Tools > World Time.**
2. Press the navigation key left or right to scroll through different cities and time zones.
3. Press **Options** (  ) > **DST Setting** (  ) to turn daylight saving time on or off.



## Section 3

# Trumpet Mobile Service Features

**SAMSUNG**





## Trumpet Mobile Service Features: The Basics

### In This Section

---

- ♦ Using Voicemail
  - ♦ Using SMS Text Messaging
  - ♦ Using Caller ID
  - ♦ Responding to Call Waiting
- 

Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your **Trumpet Mobile Service**. This section outlines your basic Trumpet Mobile Service features.



# Using Voicemail

---

## Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Trumpet Mobile Voicemail and personal greeting as soon as your phone is activated.

**To set up your voicemail:**

1. Press and hold .
2. Follow the system prompts to:
  - Create your passcode.
  - Record your name announcement.
  - Record your greeting.
  - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

### **Note:**

#### **Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Trumpet Mobile recommends you enable your voicemail passcode.

## Vicemail Notification


There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.

## New Vicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

**To call your voicemail:**

- ▶ Press and hold .

**To display your Missed Log:**

- ▶ Press the navigation key up.

**Note:** Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in an Trumpet Mobile Service Area.


## Retrieving Your Voicemail Messages

You can review your messages directly from your phone or from any other touch-tone phone. To dial from your phone, you can either speed dial your voicemail or use the menu keys.

### Using One-Touch Message Access


- ▶ Press and hold . (Your phone will dial your voicemail box.)

### Using the Menu Keys on Your Phone to Access Your Messages

1. Select **MENU > Messaging > Voicemail > Call Voicemail**.
2. Press  to listen to your messages.

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your phone.

### Using a Phone Other Than Your Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

**Tip:** When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

## Vicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 105.

		
Date/Time	Send Reply	Advance
		
Replay	Rewind	Forward
		
Erase	Call Back	Save
		
Cancel	Help	Skip






## Vicemail Options

Your phone offers several options for organizing and accessing your voicemail.

### Using Expert Mode






Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

**To turn Expert Mode on or off:**

1. Press and hold  to access your voicemail. (If your voicemail box contains any new or saved messages, press  to access the main voicemail menu.)
2. Press  to change your Personal Options, following the system prompts.
3. Press  for Expert Mode.
4. Press  to turn Expert Mode on or off.


## Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold **1**  to access your voicemail. (If your voicemail box contains any new or saved messages, press **\* 62**  to access the main voicemail menu.)
2. Press **3**  to change your Personal Options, following the system prompts.
3. Press **2**  for Administrative Options.
4. Press **5**  for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.


## Trumpet Mobile Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **8**  after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)


## Voicemail-to-Voicemail Message

Record and send a voice message to other Trumpet Mobile Voicemail users.

1. From the main voicemail menu, press **2**  to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.



## Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Trumpet Mobile Voicemail user.

1. After listening to a voice message, press .
2. Follow the voice prompts to record and send your reply.




## Voicemail-to-Voicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Trumpet Mobile Voicemail users.



1. After listening to a message, press  and then .
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

## Voicemail-to-Voicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other Trumpet Mobile users.




1. Listen to the message and press  to reply.
2. After the tone, record your message, press  to end recording and then  to indicate you are satisfied with the message you recorded.

**Note:** To re-record your message, press 3.

3. Press  to mark receipt requested.
4. Press  to send your voicemail message.

## Extended Absence Greeting


When your phone is turned off or you are off the network Trumpet Mobile makes available to you for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press  for Personal Options.
2. Press  for greetings.
3. Press  to record an Extended Absence Greeting.

## Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.
















To clear the icon from the display screen:

1. Select **MENU > Messaging > Voicemail > Clear Envelope**.
2. Select **Yes** or **No** and press .



## Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

-  Listen
-  Envelope Information
-  Reply
-  Advance 8 Seconds
-  Replay
-  Rewind
-  Forward Message
-  Erase
-  Callback
-  Save
-  Options
-  Send a Message
-  Personal Options
  -  Notification Options
    -  Phone Notification



Numeric Paging to a Phone



Return to Personal Options Menu



Administrative Options



Skip Passcode



Autoplay



Message Date & Time On/Off



Change Passcode



Group Distribution List



Return to Personal Options Menu



Greetings



Personal Greetings



Name Announcement



Extended Absence Greeting



Return to Personal Options Menu



Expert Mode (On/Off)



Place a Call



Disconnect

## Using SMS Text Messaging

With SMS Text Messaging, you can use other people's wireless phone numbers to send instant text messages from your phone to their messaging-ready phones – and they can send messages to you. When you receive a new message, it will automatically be displayed on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as "I'm running late, I'm on my way," that make composing messages fast and easy. You can also customize your own preset messages (up to 160 characters) from your phone or at [www.trumpetmobile.com](http://www.trumpetmobile.com).





### Composing SMS Text Messages

To compose an SMS Text message:




1. Select **MENU** > **Messaging** > **Send Message**.

**Shortcut:**

Press the navigation key left. Proceed with steps 2 – 6.

2. Select **Mobile #**, **Email**, or **Contacts** and press .
3. Enter the number or email address, or select the contact, and select **Next** (). (You may include up to 10 recipients per message.)
4. Compose a message using one of the following methods:
  - To type a message, use your keypad to enter your message. Use  to select a character input mode.
  - To use a preset message, recent message, or an emoticon, select **Options** () and select **Preset Msg**, **Recent Msg**, or **Emoticons**. Press the

number on the keypad that corresponds to the number next to the message or emoticon.





5. Select **Next** (  ).
6. Review your message and press **Send** (  ). You may also select the following additional messaging options by pressing **Options** (  ):
  - **Edit** to edit the existing message before sending.
  - **Save to Drafts** to save the message without sending.



## Accessing SMS Text Messages

### To read an SMS Text message:

- ▶ When you receive a text message, it will automatically appear on your phone's main display screen. Use your navigation key to scroll down and view the entire message.

### To reply to an SMS Text message:





1. While the message is open, select **Reply** (  ).
2. Compose your reply, use the preset messages or emoticons.
  - To type a message, use your keypad to enter your message. Use  to select a character input mode.
  - To use a preset message or an emoticon, select **Options** (  ) and select **Preset Msg**, **Recent Msg**, or **Emoticons**. Press the number on the keypad that corresponds to the number next to the message or emoticon.
3. Select **Next** (  ).

4. Review your message and press **Send** (  ). You may also select the following additional messaging options by pressing **Options** (  ):
  - **Edit** to edit the existing message before sending.
  - **Save to Drafts** to save the message without sending.

## Using Preset Messages

Preset messages make sending text messages to your friends, family, and coworkers easier than ever.

**To add or edit preset messages:**





1. Select **MENU > Messaging > Settings > Preset Messages**.
2. Select **Options** (  ) and press **Add New**.  
— or —  
Highlight a message you wish to edit and select **Options** (  ) and press **Erase** or select **Edit** (  ).
3. Enter your new message or changes and press **Done** (  ). (See “Entering Text” on page 36.)

## Using Caller ID

---

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

**To block your phone number from being displayed for a specific outgoing call:**


1. Press   .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call Trumpet Mobile Customer Care.

## Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

**To respond to an incoming call while you're on a call:**

- ▶ Press . (This puts the first caller on hold and answers the second call.)

**To switch back to the first caller:**

- ▶ Press  again.

**Tip:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **\*70** before placing your call. Call Waiting is automatically reactivated once you end the call.





## Trumpet Mobile Voice Kit

### In This Section

---

- ◆ Getting Started With Trumpet Mobile Voice Kit
  - ◆ Programming the Phone for Voice Dialing
  - ◆ Setting Up Voice Dial
  - ◆ Placing a Call Using Voice Dial
  - ◆ Reviewing Voice Dial Entries
  - ◆ Erasing Voice Dial Entries
  - ◆ Managing Voice Memos
- 

**With Trumpet Mobile Voice Kit, reaching your friends, family, and co-workers has never been easier — especially when you're on the go.** You can also record and playback voice memos for hands-free note taking. Your voice does it with Trumpet Mobile Voice Kit.

This section outlines the Trumpet Mobile Voice Kit service.

# Getting Started With Trumpet Mobile Voice Kit

---

With Trumpet Mobile Voice Kit:

- You can store up to 20 of your most frequent contacts' phone numbers, so you can simply say the name of the person you want to call.
- There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- You can call anyone in your address book — even if you don't remember their phone number.
- You can record brief voice memos to remind you of important events, points for meetings, phone numbers, or grocery list items.

## It's Easy to Get Started

You begin by programming your phone to recognize the names of the individuals or companies you call frequently.

### Tips on recording names

- Avoid recording similar names phonetically. If you record a name similar to one that is already stored in a voice-dial memory, the phone requests another name.
- Avoid recording in a noisy place.
- Speak clearly and naturally.
- Avoid very long or very short names. Names with two to five syllables are recommended.
- If a voice dial entry does not properly connect, you may need to record the name and number again.

**Note:**

Record Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).



## Programming the Phone for Voice Dialing

---

Programming your phone for voice activated dialing is easy. The phone provides voice prompts and screen displays to guide you through the recording process. To program the phone for voice activated dialing:


1. Select **Voice Kit > Voice Dial > Record**.

**Note:** You can also access Voice Kit by selecting **MENU > Voice Kit**.

2. The phone will prompt you to "Please say the name?" Wait for the beep and then say the name. (For best results, use names with at least two syllables, or use both a first and last name.) The phone stores the name as a "first" sample, and then prompts you to say the name again.
3. Respond to the prompt by repeating the name after the beep exactly as you did the first time. The phone stores the name as a second sample and then requests you to enter a phone number.
4. Enter the phone number on the keypad and select **OK** ()
5. Enter a name for the voice dial entry using the keypad and select **Done** (.

**Note:** If you do not enter a name for the voice dial entry, the phone number will display when reviewing your voice tag list.

## Setting Up Voice Dial




Voice Dial is always active once you have programmed the phone with Voice Dial entries. To place voice activated calls, press and hold . Then say the name into the phone after you hear the voice prompt and the beep.

You can also initiate a voice activated call by opening the flip, when this feature is activated.

**To change the Voice Dial setup options:**

1. Select **Voice Kit > Voice Dial > Set Active**.

**Note:** You can also access Voice Kit by selecting **MENU > Voice Kit**.


2. Press the Navigation key up or down to scroll between the following options:
  - **Talk Only:** enables voice dialing by pressing and holding .
  - **Talk and Flip:** enables voice dialing by pressing and holding  (when the phone is open), or by simply opening the phone's flip cover.
3. Select the desired option and press .

**Tip:** Voice Dial can also be accessed by holding down the SPEAKER key.

## Placing a Call Using Voice Dial

---

To place a call if **Voice Dial** is inactive:

1. Open the flip and press and hold .
2. At the voice prompt, say the name into the phone.
  - The phone automatically places the call if it recognizes the name.
  - If the phone does not recognize the name, it beeps twice and says “**Please say the name.**”

## Reviewing Voice Dial Entries

---


To review **Voice Dial** entries:

1. Select **Voice Kit > Voice Dial > Review**.

**Note:** You can also access Voice Kit by selecting **MENU > Voice Kit**.

2. A list of saved voice dial tags is displayed. Scroll to the desired entry and press . The recorded name plays audibly.

**Note:** You can scroll through entries without having to listen to each one, or you can listen to them all as they play in order.

3. Press  to return to the previous screen.

## Erasing Voice Dial Entries

To erase an individual Voice Dial entry:

1. Select **Voice Kit > Voice Dial > Review.**

**Note:** You can also access Voice Kit by selecting **MENU > Voice Kit.**

2. Highlight the desired entry using the navigation key.
3. Select **Options (ⓘ) > Erase.**
4. Select **Yes** to confirm and press **MENU OK**.

To erase all Voice Dial entries:

1. Select **Voice Kit > Voice Dial > Review.**
2. Select **Options (ⓘ) > Erase All.**
3. Select **Yes** to confirm and press **MENU OK**.

## Managing Voice Memos

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

### Recording Voice Memos

To record a voice memo:

1. Select **Voice Kit > Voice Memo > Record.**




**Note:** You can also access Voice Kit by selecting **MENU > Voice Kit.**

2. Begin recording after the prompt.

### To end the recording of your memo:

- ▶ Press  for **Done**.

### To record a conversation during a phone call:

1. During a call, select **Options > Voice Memo**. (A one-minute counter is displayed on the screen indicating the amount of time a single voice memo can be recorded.)
2. To pause the memo, select **Pause** (  ). To resume the recording, select **Resume** (  ).
3. To finish recording, select **Done** (  ).

**Note:** Your voice is not recorded during this process, only the incoming audio from the other caller.

**Note:** Your phone can store a total of 20 memos or up to three minutes.





## Voice Memo Options

To play the voice memos you have recorded:

1. Select **Voice Kit > Voice Memo**.




**Note:** You can also access Voice Kit by selecting **MENU > Voice Kit**.


2. Select **Review** and press . (The phone displays a list of saved memos, with the first one selected.)
3. Highlight the desired memo and press .  
— or —  
Press the number corresponding to the memo you want to review.

## Edit Caption

Allows you to change the default label given to the voice memo.

To change the label name:

1. Select **Voice Kit > Voice Memo**.
2. Select **Review** and press . (The phone displays a list of saved memos, with the first one selected.)
3. Highlight the desired memo and press **Options** (  ) > **Edit Caption**.
4. Press and hold  to erase the name.




5. Enter the new name using the keypad and press  for **Save**.

## Erasing Voice Memos




To erase an individual memo:

1. Select **Voice Kit > Voice Memo**.

**Note:** You can also access Voice Kit by selecting **MENU > Voice Kit**.

2. Select **Review** and press .
3. Highlight the desired memo.
4. Select **Options** (  ) and press **Erase**.
5. Select **Yes** and press .

To erase all voice memos:

1. Select **Voice Kit > Voice Memo > Review**.
2. Select **Options** (  ) > **Erase All** (  ).
3. Select **Yes** and press .

## Section 4

# Safety and Warranty Information

**SAMSUNG**



## Important Safety Information

### In This Section

---

- ◆ General Precautions
  - ◆ Maintaining Safe Use of and Access to Your Phone
  - ◆ Using Your Phone With a Hearing Aid Device
  - ◆ Caring for the Battery
  - ◆ Radiofrequency (RF) Energy
  - ◆ Owner's Record
  - ◆ Phone Guide Proprietary Notice
- 

**This phone guide contains important operational and safety information that will help you safely use your phone.**

Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

## General Precautions

---

There are several simple guidelines to operating your phone properly and Speak directly into the mouthpiece.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

<b>Note:</b>	For the best care of your phone, only Trumpet Mobile authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.
--------------	--

# Maintaining Safe Use of and Access to Your Phone

## Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider for details.

## Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

**Tip:** Purchase an optional hands-free accessory at your local Partner Store.

## Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

## Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

**Note:** Always turn off the phone in health-care facilities and request permission before using the phone near medical equipment.

### **Turning Off Your Phone Before Flying**

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

### **Turning Off Your Phone in Dangerous Areas**

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

**Note:** Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

### **Restricting Children's Access to Your Phone**

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that decrement your airtime balance.



## Using Your Phone With a Hearing Aid Device

Your Trumpet Mobile Phone has been tested for hearing aid device compatibility. When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have label located on the box.

**Your Trumpet Mobile Phone A420 by Samsung has an M3 rating.**

These ratings are not guarantees. Results will vary depending on the level of immunity of your hearing device and degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your aids. Most new hearing aids have at least an M2 immunity level. Add the "M" ratings of your hearing aid and your phone to determine probable usability:



- Any combined rating equal to or greater than six offers best use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "best use." This is synonymous for T ratings.

Trumpet Mobile further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. With the Trumpet Mobile 30-day Risk-Free Guarantee, you may return the phone within 30 days of purchase for a full refund.

## Getting the Best Hearing Device Experience With Trumpet Mobile Phone A420 by Samsung®

To further minimize interference:

- There is usually less interference on the microphone setting than the telecoil setting.
- Set the phone's Display and Keypad backlight settings to ensure the minimum time interval:
  1. Press **MENU** > **Settings** > **Display** > **Backlight**.
  2. Select **Main Display** or **Keypad** and press .
  3. Select the minimum time setting (8 seconds) and press .
    - Use phones with a pull-out antenna. Phones with embedded antennae may produce more interference.
    - Position the phone so the antenna is farthest from your hearing aid.
    - Move the phone around to find the point with least interference.

# Caring for the Battery

## Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently, there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Trumpet Mobile is not aware of similar problems with Trumpet Mobile phones resulting from the proper use of batteries and accessories approved by Trumpet Mobile or the manufacturer of your phone. Use only Trumpet Mobile or manufacturer-approved batteries and accessories found at Partner Stores or through your phone's manufacturer. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
  - Less than one month:  
-4° F to 140° F (-20° C to 60° C)
  - More than one month:  
-4° F to 113° F (-20° C to 45° C)

## Disposal of Lithium Ion (Li-Ion) Batteries

For safe disposal options of your Li-Ion batteries, contact your nearest Trumpet Mobile authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

# Radiofrequency (RF) Energy

---

## Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

## Knowing Radiofrequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

## Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Trumpet Mobile supplied or approved carrying case, holster or other body-worn accessory. Use of non-Trumpet Mobile-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at [www.fcc.gov](http://www.fcc.gov).

## Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring, and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the are:

CDMA mode (Part 22):

Head: 0.839 W/kg; Body-worn: 0.968 W/kg

PCS mode (Part 24):

Head: 1.32 W/kg; Body-worn: 0.481 W/kg

## FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: A3LSPHA420.

More information on the phone's SAR can be found from the following FCC

Web site: <http://ftp.fcc.gov/cgb/sar/>.

## Owner's Record

---

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Trumpet Mobile Phone A420 by Samsung®

Serial No.:

## Phone Guide Proprietary Notice

---

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797  
5,506,865 5,544,196 5,657,420 5,101,501  
5,267,261 5,414,796 5,504,773 5,535,239  
5,600,754 5,778,338 5,228,054 5,337,338  
5,710,784 5,056,109 5,568,483 5,659,569  
5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 5A (September 2005)

## Manufacturer's Warranty

### In This Section

---

#### ♦ Manufacturer's Warranty

---

**Your phone has been designed to provide you with reliable, worry-free service.** If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit [www.trumpetmobile.com](http://www.trumpetmobile.com) and click the "Legal" link at the bottom or call Trumpet Mobile Customer Care at 1-888-774-2000.

# Manufacturer's Warranty

---

## STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch/Holster	90 Days
Game Pad	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.



What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

"THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;

"WARRANTIES OF TITLE OR NON-INFRINGEMENT;

"DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

"THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR

"COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN.

SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, LLC  
1301 E. Lookout Drive  
Richardson, Texas 75082  
Phone: 1-800-SAMSUNG  
Phone: 1-888-987-HELP (4357)

©2007 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice. [012307]



# Index

## A

- Abbreviated Dialing 59
- Affinity Service
  - Dialing Trumpet Mobile Services 83
- Airplane Mode 55
- Alarm Clock 89
- Answering Calls 28
- Auto Answer Mode 62

## B

- Backlight 47
- Battery 19–21
  - Capacity 19
  - Charging 21
  - Installing 20

## C

- Calculator 91
- Call Answer Mode 62
- Call History 69–74
  - Erasing 74
  - Making a Call 72
  - Prepending a Phone Number 74
  - Saving a Phone Number 73
- Call Setup Options 59
- Call Waiting 111
- Caller ID 110
- Contact Match 60
- Contacts 75–83
  - Adding a Phone Number 80
  - Adding an Entry 76
  - Dialing From 34
  - Editing a Entry 82

- Editing a Phone Number 80
- Entry Options 79
- Erasing 66
- Finding Entries 77
- Countdown 93

## D

- Dialing Options 27
- Display Language 58
- Display Screen 16, 48

## E

- Entering Text 36–39
  - ABC Mode 38
  - Emoticons 39
  - Numbers 39
  - Preset Messages 39
  - Symbols 39
  - T9 Text Input 37

## I

- Introduction i

## K

- Key Functions 13
- Key Tones 44

## L

- Location Settings 51
- Lock Code
  - Changing 65
- Locking Your Phone 64

## M

- Making Calls 26
- Memo Pad 90
- Menu Style 48
- Messaging
  - Deleting Old Messages 52
  - Setting Alerts 52

- Signature 53
- P**
  - Phone (front view) 12
  - Phone Number
    - Displaying 25
    - Finding 32
    - With Pauses 33
  - Phone Settings 41–62
    - Auto Answer Mode 62
    - Call Answer Mode 62
    - Display Settings 47–50
    - Location Settings 51
    - Messaging Settings 52–54
    - Sound Settings 42–46
    - TTY Use 56
  - Plus (+) Code Dialing 34
  - Preset Messages 39
- R**
  - Resetting Your Phone 67
  - Restriction 61
  - Ringer Types 42
  - Ringer Volume 45
- S**
  - Scheduler 86–88
  - Security 63–67
    - Security Menu 64
  - Silence All 46
  - SMS Text
    - Messaging 107–109
  - Special Numbers 66
  - Speed Dialing 35
    - Assigning Numbers 81
- T**
  - T9 Text Input 37
  - Task List 92
  - Text Greeting 47
  - Trumpet Mobile 411 7
  - Trumpet Mobile Customer Care 6
  - Trumpet Mobile Service Setting Up 3
  - Trumpet Mobile Voice Kit 113–122
  - TTY Use 56
  - Turning Your Phone On and Off 18
- U**
  - Unlocking Your Phone 65
- V**
  - Voice Memos 119–122
  - Vicemail
    - Menu Key 105
    - Options 101
    - Retrieving 100
    - Setting Up 5, 98
  - Volume
    - Text Message, Voice Mail, Alarms 45
- W**
  - World Time 93